



USER MANUAL DATAGUARD WITH E-LOCK







1. Visual and acoustic signals

Signal	Explanation	Comment
✓	Right code	
✘	Wrong code or code denied	
■	Short beep	
■■■	Long beep	
	LED green on	The lock open
	LED red on	The lock closed




 
2. Power shut down mode

			✓	✘
1	The lock will be power shut down mode condition 15 second after the locked position.			
2	For activation the lock, enter "*" and the system will be sound beep, then the lock can be operated.		■■	

3. Opening the lock






 


 


			✓	✘
1	Enter "*" to activate the system from power shut down mode.		■■	
2	Enter the 4-digit user code e.g and then press "Open".		■■■■	■■■■■
3	- The lock will open and the indicator LED light will show green. - When the LED light goes off the bolt is fully retracted and door handle may be pulled to open the door.			
4	- The lock will remain open for 7 seconds before automatically relocking. The LED light will confirm this by showing red. - The door can be slam closed and locked, while the lock is in this position .			

4. Changing the master code

			✓	✘
1	Enter "*" to activate the system from power shut down mode.		■■	
2	Enter button "Open".		■■■■■■	■■■■■■■
3	Enter your old 5-digit master code e.g.		■■■■■	■■■■■■■
4	Enter your new 5-digit master code e.g.		■■■■■	■■■■■■■

- Default factory master code is **5-6-7-8-9**.
- **In order to change the master code, the unit must first be in the power shut down (sleep) mode.**
- **If an incorrect master code is input, the system will go to power shut down mode, following which you must wait 20 seconds before recommencing the process.**

5. Changing the user code

			✓	✗
1	Enter "*" to activate the system from power shut down mode.			
2	Re-enter "*" to entering change user code mode.			
3	Enter your 5-digit master code e.g.			
4	Enter your new 4-digit user code e.g.			

- Default factory user code is **1-2-3-4**.
- **In order to change the user code, the unit must first be in the power shut down (sleep) mode.**
- **If an incorrect user code is input, the system will go to power shut down mode, following which you must wait 20 seconds before recommencing the process.**

6. Changing the battery

- a. Remove black plastic battery compartment cover (located at the base of the lock cover) by pressing the plastic retaining latch of the cover.
- b. Allow the battery and its attached leads to drop down and out of the battery compartment. If it does not drop, gently pull on the battery holder until it drops out.
- c. Remove the battery holder cover and remove the batteries.
CAUTION! Hold onto the battery terminal to avoid pulling the wires out of the housing.
- d. Replace with 4 x size "AA" (1,5 V) **Alkaline** batteries.
- e. Gently push the battery terminal and the leads completely into the lock housing.
- f. Re-Install the battery cover by placing one side of the cover in position first and then gently pressing the retaining clip into place.